 
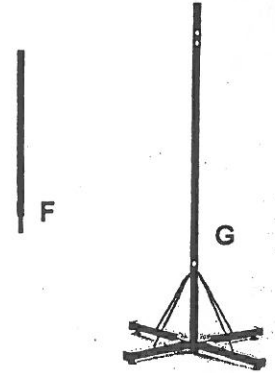 
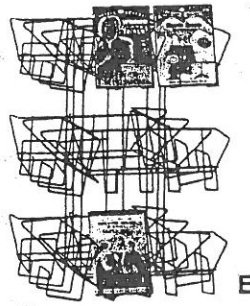 


## ASSEMBLY INSTRUCTIONS FOR #175-2DVD SPINNER RACK

### PARTS LIST

- A. Plastic Sign Holder (1)
- B. Washer (2)
- C. Cotter Pin (2)
- D. Bearing (2)
- E. DVD Tier (2)
- F. Top Extension Tube (1)
- G. Base Setup (1)

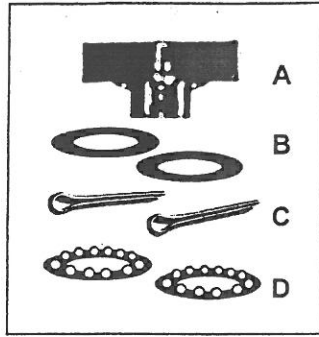

### DIRECTIONS

- 1) Insert Cotter Pin (part C) into bottom hole of Base Setup (part G), as indicated. (See Figure 1)
- 2) After Cotter Pin is inserted all the way, bend the longer wire end of the Cotter Pin away from the shorter wire end. This will secure the Cotter Pin into the hole so it won't fall out. We recommend using pliers to bend the wire.
- 3) Place one Washer (part B) over the Cotter Pin.
- 4) Place one Bearing (part D) over the Washer.
- 5) Place the first DVD Tier (part E) over the tube and let it rest on top of the Bearing.
- 6) Attach Top Extension Tube (part F) to the top of the Base Setup. (See Figure 2)
- 7) Insert Cotter Pin (part A) into the top hole of Base Setup (part G), as indicated. (**Note:** Make sure you do not insert the Cotter Pin into the middle hole – this hole is not used for this rack.)
- 8) After Cotter Pin is inserted all the way, bend the longer wire end of the Cotter Pin away from the shorter wire end.
- 9) Place one Washer (part B) over the Cotter Pin.
- 10) Place one Bearing (part D) over the Washer.
- 11) Place the second DVD Tier (part E) over the tube and let it rest on top of the Bearing.
- 12) Attach Plastic Sign Holder (part A) to top of DVD rack.
- 13) Use adjustable glides (4) located at the bottom of the Base Setup to level the rack on uneven floors.

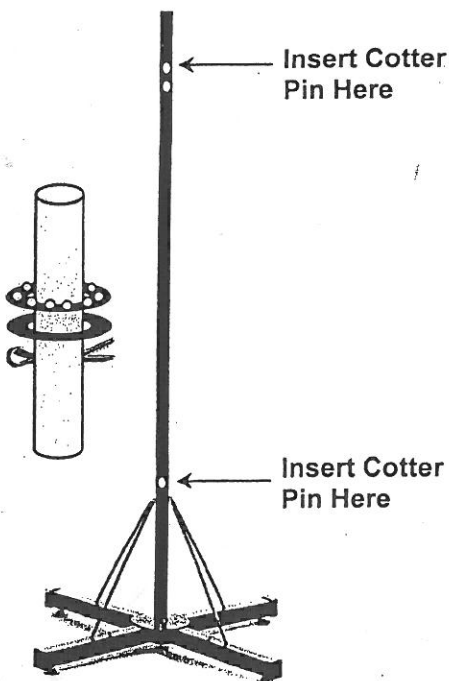


Figure 1

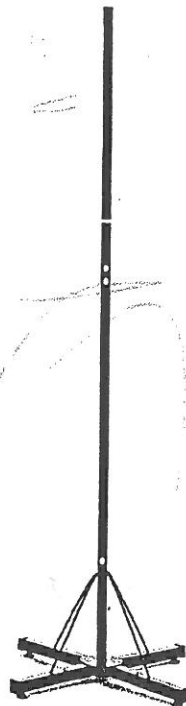


Figure 2

