


## FreeWall - Individual Metal Slatwall Fixture For Plaster wall

### Assembly

Metal slat fixture with front connection for mounting on existing plaster wall

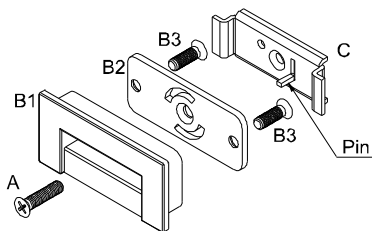

Assemble all parts before installation and make sure the pin is to the right as above.

**1**

Position, mark and cut slits as required, using the measurements above.

**2**

Assemble FreeWall to plaster wall using provided screw (A)

**3**

Unscrew (A) until the pin in part (C) is at the same level as part (B2)

**4**

1. Screw (A) until part (C) is rotated to be perpendicular to part (B2).  
2. Insert small pin into the hole as shown in diagram.III to stop part (C) from continuing to rotate.

**5**

Fasten the screw.

### Disassembly

**1**

Unscrew (A) until the hole in part (C) is visible

**2**

1. Insert small pin into the hole as shown in diagram to stop part (C) from continuing to rotate.  
2. Fasten the screw

**3**

Pull the pin out

**General Note:**

It is the responsibility of the purchaser and/or installer to verify that the mounting surface is solid and capable of supporting the intended weight of display. It is recommended to consult with a professional and determine the appropriate fastener/anchor needed for the mounting surface. UDIZINE is solely responsible for the quality of its products, and not accountable for faulty installation and ill use of its products beyond recommended limitations.