





RTA - Base Kit Installation Instructions - 4-Way/Cube

Tools Required

- Rubber Mallet
- Phillips Screwdriver

Tools Included

- Allen Wrench
(for confirmat screws)

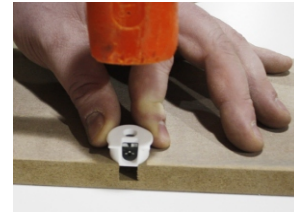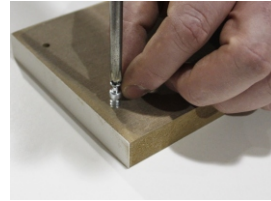

Step 1

Assemble the (4) kick base parts

- Start by installing the CamLock pins into the pre-drilled holes with the Phillips screwdriver
- Next, install the CamLocks by tapping them into position with the mallet
- Match the kicks with the same lengths parallel to each other & lock them with the CamLocks
- Tip - Tilt the Phillips screwdriver slightly upwards to lock the CamLocks

Step 2

Assemble the kick base to the spinner base

- Start by installing the CamLock pins into the pre-drilled holes of the spinner base
- Set the kick base onto the spinner base and fasten together with the CamLocks
- Tip - If you do not want to utilize the spinner base option, install a screw through the bottom of the base panel into the top panel (taking care not to puncture through the top panel). This will stabilize the spinner component of the base unit.

Step 3

Install casters (optional)

- Install optional casters by positioning the castor into each of the 4 corners
- Using the pan head screws, attached the casters through the pre-drilled holes on the inside corners of the kick base.
- Tip - get all 4 screws started before doing the final tightening for easier alignments

Step 4

Install (4) wooden dowel pins into base top

- Install the 4 wooden dowel pins into the pre-drilled holes on the base top
- The spinner base unit is now ready to install display panels

Base Kit Contents

- A. (1) Spinner Base Top
- B. (4) Kick Base parts w/ pre-drilled holes
- C. (12) CamLocks
- D. (12) CamLock Pins
- E. (16) Pan Head Screws
- F. (4) Dowel pins (4-Way)
(8) Dowel pins (Cube)
- G. (12) Confirmat Screws
- H. (12) Screw caps
- I. (4) Casters
- J. (1) Assy. Instructions





Tools & Hardware Required

(Supplied with base kit hardware - box 3 of 3)

- (1) Allen Wrench
- (12) Conformat screws
- (12) Screw caps
- (8) wooden dowel pins

Tools - Optional

- rubber mallet



Kit Contents

Box 1 of 3


- 2 Cube panels



Kit Contents

Box 2 of 3

- 2 Cube panels
- Cube top
- Assy. Instructions

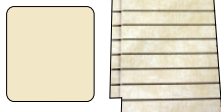

Step 1

Assemble the base kit first, then position it to accept the Cube panels

- Make sure that the 4 wooden dowel pins are inserted into the base top
- Tip - A hammer, or rubber mallet can be used to seat the wooden dowels fully

Step 2

Assemble Cube display panels onto base

- Start by installing two panels together onto the dowel pins. Locate the holes on the bottoms of the panels and set them onto the pins. Then begin attaching the panels together with the conformat screws. **Note: it is helpful to use two people at this step.**
- Once the first two panels are together, you can install the remaining panels to complete the unit
- Tip - Do not fully tighten all the screws until all the panels are in place. Once all the cube Panels are together and in place, final tighten and snug the screws.

Step 3

Fit the top onto the cube

- Fit the top to the cube using the supplied dowel pins.

Step 4

Adhere the decorative screw caps to cover the heads of the screws

- Peel the decorative screw caps to expose the sticky back, and carefully center and cover the screw heads.

