


2a

ATTACH THE LOWER LEGS TO THE LOWER XBRACE WITH FLAT WASHERS, LOCK WASHERS, AND THE SHORT HEX HEAD SCREWS AS SHOWN

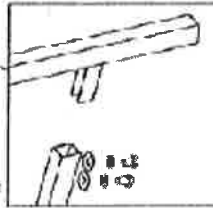


- 4x 5/16" - 18 x 1.75" HEX HEAD SOCKET SCREW
- 12x 5/16" SPRING LOCK WASHER
- 12x 5/16" WASHER
- 8x 5/16" - 18 x .5" HEX HEAD SOCKET SCREW
- LARGE ALLEN KEY
- SMALL ALLEN KEY


- 2x 2x HANG BAR
- 2x 1/4" - 20 X 1.125" SET SCREW
- 4x 4x CONNECTOR TOP
- LARGE ALLEN KEY
- SMALL ALLEN KEY

1a


UNFOLD THE LOWER XBRACE. THIS BRACE WILL BE SMALLER & HAVE SUPPORT WIRES ATTACHED

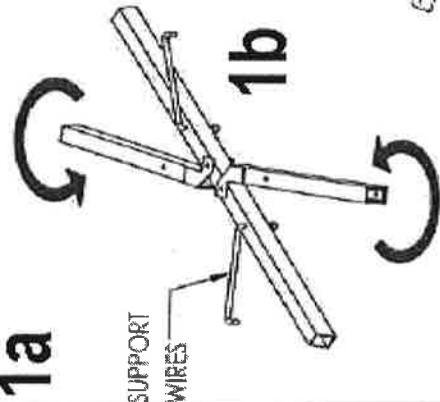

PULL UP ON THE SUPPORT WIRES & INSERT THE END INTO THE HOLE ON THE ADJACENT TUBE

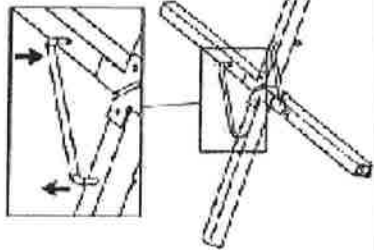


1b

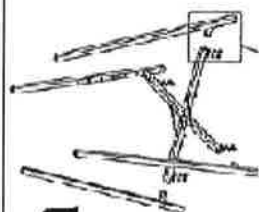


2b

UNFOLD THE UPPER XBRACE & SECURE TO THE LOWER LEGS WITH FLAT WASHERS, LOCK WASHERS, AND THE LONG HEX HEAD SCREWS AS SHOWN

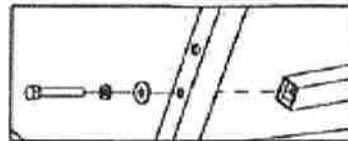

3

FLIP IT OVER

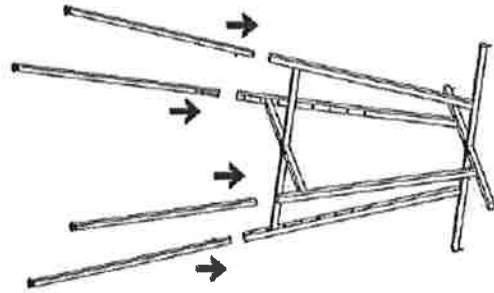


ONCE YOU FLIP IT OVER INSTALL THE ADJUSTABLE LEGS BY DEPRESSING THE PUSH BUTTONS & INSERTING THEM INTO THE LOWER LEGS.

IF THEY ARE NOT ALREADY INSTALLED, SCREW THE LEVELERS ONTO THE ADJACENT LEGS

ONCE COMPLETED FLIP IT OVER


4

TAKE A HANG BAR CONNECTOR TOP & BOTTOM- JOIN THEM TOGETHER SO THE TAB IS INSERTED INTO THE NOTCH.

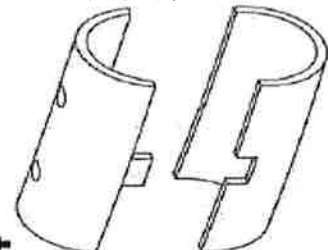

NOTE: THEY ARE NOT MEANT TO LOCK TOGETHER


5

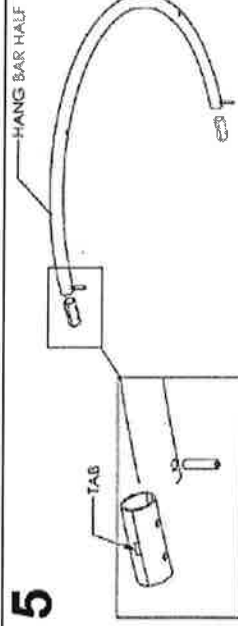

WHILE HOLDING THE C.H. TOGETHER, INSERT THEM INTO ONE OF THE HANG BAR HALVES & HAND TIGHTEN A SET SCREW SO IT STAY IN PLACE.

* REPEAT FOR OTHER CONNECTOR.
 NOTE: THE CONNECTOR MUST BE INSERTED SO THE TAB IS FACING OUT. THIS WILL ENSURE THE CURVE OF THE CONNECTOR FOLLOWS THE CURVE OF THE HANG BAR.

6

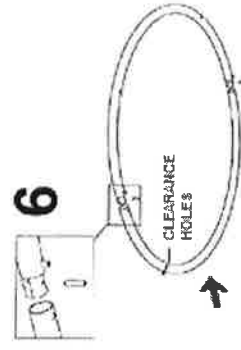

SLEEVE THE REMAINING HANG BAR HALF ONTO THE EXPOSED CONNECTORS AND HAND TIGHTEN THE REMAINING SET SCREWS TO SECURE. ONCE ALL 4 SET SCREWS HAVE BEEN STARTED, TIGHTEN WITH THE SMALL ALLEN KEY UNTIL THE HANG BAR FEELS RIGID AND NO SET SCREW IS EXPOSED. INSTALL THE ASSEMBLED HANG BAR ONTO THE ASSEMBLED FRAME BY INSERTING THE THUMBNAI ON THE UPPER XBRACE INTO THE CLEARANCE HOLES.