

HALF VISION SHOWCASE (SAGH4)
ASSEMBLY INSTRUCTION



NOTE: Must have two persons assemble this unit.


PARTS LIST



DOOR PULL (X2)



HW117- 4(X2)

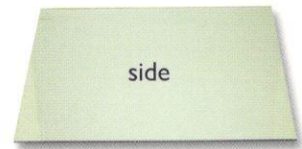

side


SIDE GLASS (X2)



#6 x 1/2" PAN SCREW (X8)



HW116 - 4 (X1)



front


FRONT GLASS (X1)



TROX SCREW x 3/4"(X18)



AK0313 - 4 (X1)



shelf



SHELF GLASS (x1)



TROX SCREW x 1/2" (X2)



HW18 - 4 (X1)

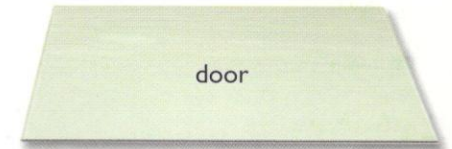

door

GLASS DOOR (x2)



AGCON3 (X2)



AGCON2 (X6)




NE09034-4 (X2)



D

FALSE BOTTOM PANEL (X1)

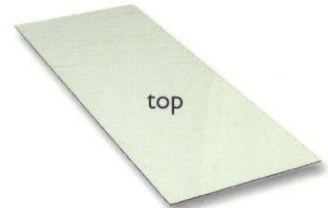

top


TOP GLASS (x1)



BOLT (X36)




#58 CAM LOCK (X36)

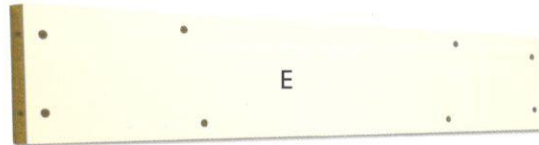

E

FRONT PANEL (x1)

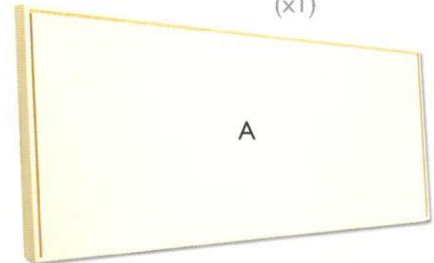

A


BOTTOM PANEL (X1)



SHELF SUPPORT (X4)



PLASTIC GLAZING (X14)

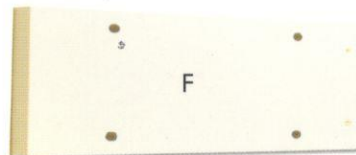


F

SIDE PANEL (X2)




GLASS GLAZING (X4)

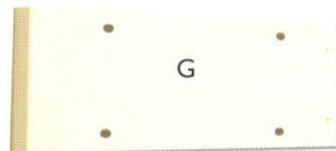

G

CENTER PANEL(X1)



B


TOEKICK (X2)



GLIDE (X4)



TOP GUIDE (X4)

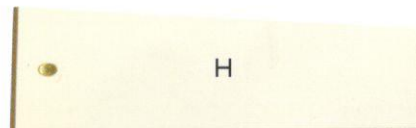

H

DOOR (X2)



C

SIDE TOEKICK (X2)



1" GRAY SCREW-CAP (x2)

TOOLS NEEDED



*T20 TROX SCREW DRIVER NEEDED





I.

BASE ASSEMBLE

TOEKICK (x2)
SIDE TOEKICK (x2)
FALSE BOTTOM (x1)

#58 CAM LOCK (x16)
BOLT (x16)
GLIDE (x4)

1. CONNECT SIDE TOE KICK PANEL WITH TOE KICK PANEL USING BOLT.
2. INSERT AND TIGHTEN #58 CAM LOCK.
3. ATTACH GLIDES ON TOE KICK.
4. CONNECT TOE KICK SET WITH FALSE BOTTOM PANEL USING BOLT.
5. INSERT AND TIGHTEN #58 CAM LOCK.
6. SIT BASE ON FLOOR.

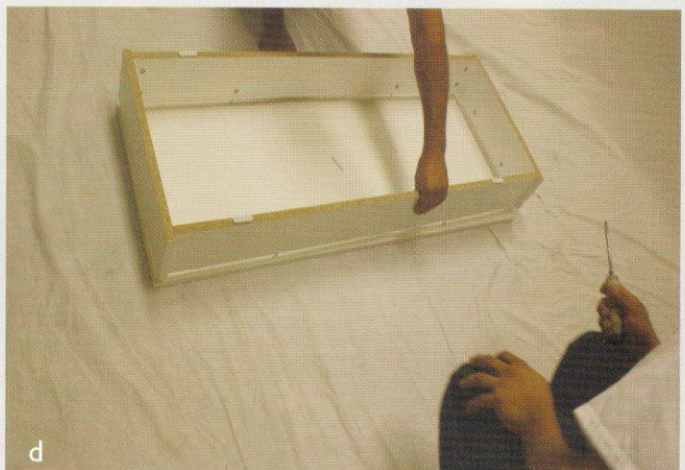
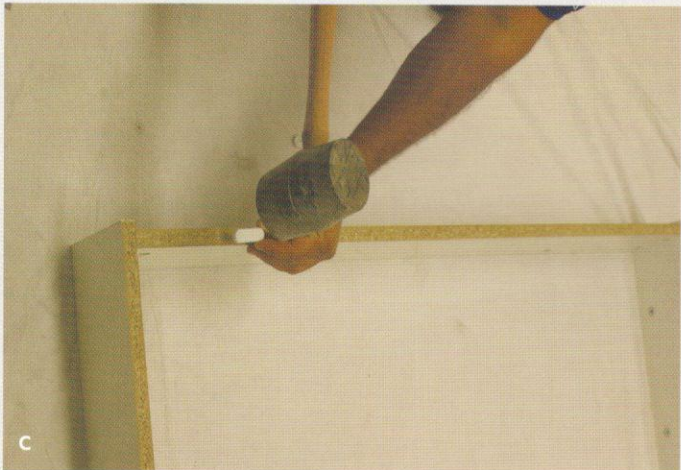
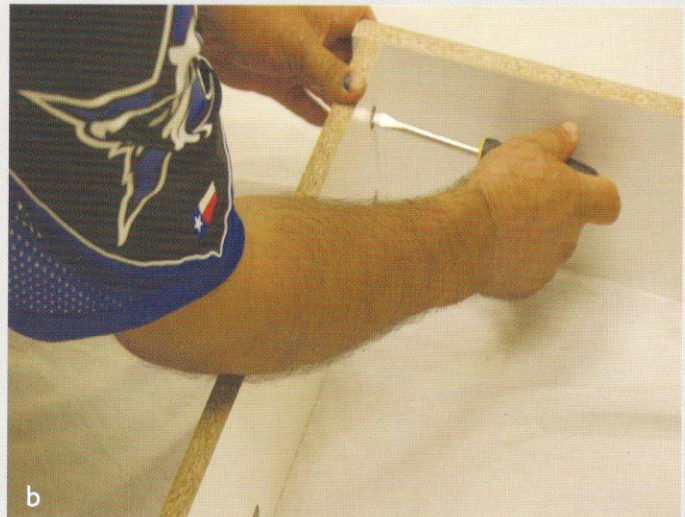
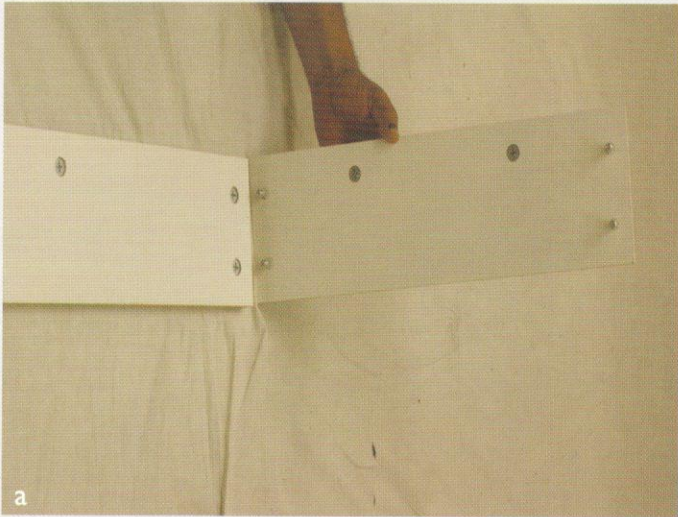


2.

STORAGE ASSEMBLE

FRONT PANEL (x1) #58 CAM LOCK (x20)
SIDE PANEL (x2) BOLT (x20)
CENTER PANEL (x1) HW117- 4 (x1)
BOTTOM PANEL (x1) AK0313 - 4 (x1)
DOOR PANEL (x2) #6 x 1/2" PAN SCREW(x4)

1. CONNECT SIDE PANEL WITH FRONT PANEL USING BOLT.
2. INSERT AND TIGHTEN #58 CAM LOCK.
3. CONNECT FRONT PANEL WITH FALSE BOTTOM PANEL USING BOLT.
4. INSERT AND TIGHTEN #58 CAM LOCK.
5. CONNECT CENTER PANEL WITH FALSE BOTTOM USING BOLT.
6. INSERT AND TIGHTEN #58 CAM LOCK.
7. CONNECT HW116-4 WITH BOTTOM PANEL USING #6 x 1/2" PAN SCREW.
8. CONNECT BOTTOM PANEL WITH STORAGE MODULAR USING BOLT.
9. INSERT AND TIGHTEN #58 CAM LOCK.
10. SNAP AK0313-4 TO FALSE BOTTOM PANEL.
11. INSERT DOOR PANEL ONTO AK0313-4.

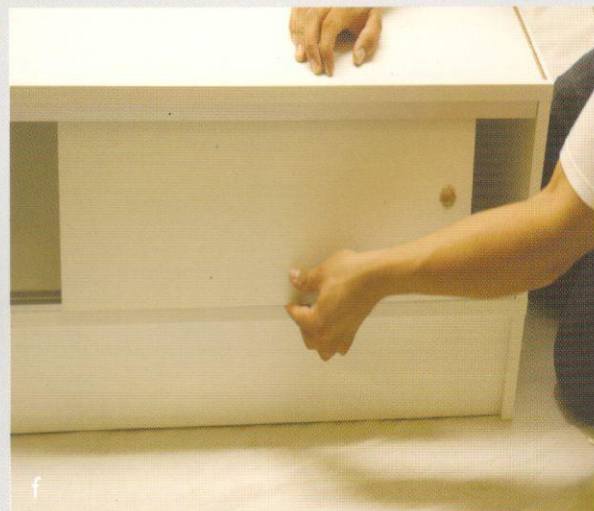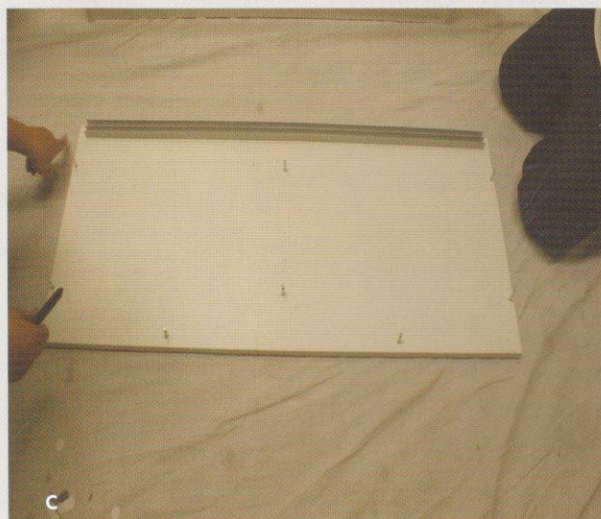
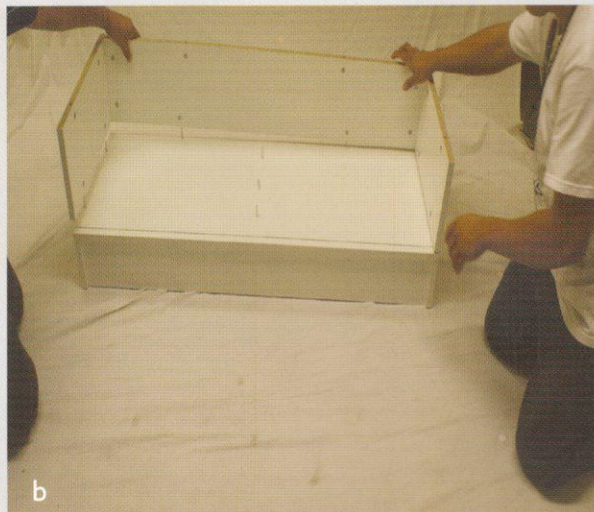
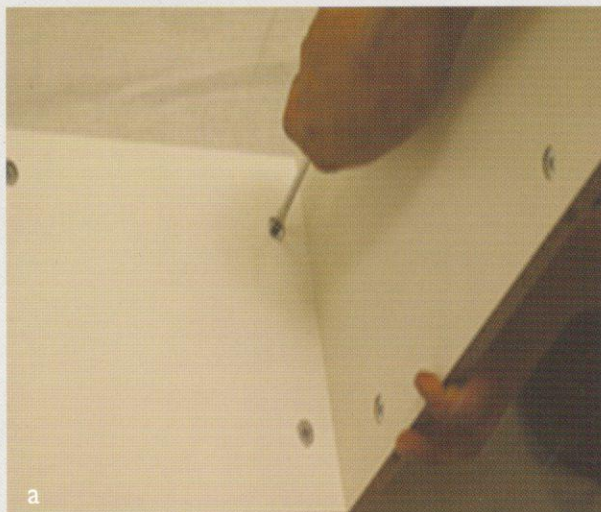


3.

GLASS MODULAR ASSEMBLE

- FRONT GLASS (x1)
- LEFT SIDE GLASS (x1)
- RIGHT SIDE GLASS (x1)
- TOP GLASS (x1)
- AGCON2 (x6)
- AGCON3 (x2)
- #6 x 1/2" PAN SCREW (x4)
- TROX SCREW x 3/4" (x18)
- SHELF SUPPORT (x4)

1. INSERT FRONT GLASS.
2. INSERT RIGHT SIDE GLASS .
3. CONNECT FRONT GLASS WITH RIGHT SIDE GLASS USING AGCON3 & 3/4"L TROX SCREW.
4. CONNECT RIGHT SIDE GLASS WITH BOTTOM USING AGCON2, 3/4"L TROX SCREW & #6X1/2" PAN SCREW.
5. REPEAT SETP 3 AND 4. TO CONNECT LEFT SIDE GLASS WITH FRONT GLASS.
6. CONNECT TOP GLASS WITH MODULAR USING 3/4" TROX SCREW.
7. CONNECT TROX SCREW 3/4" THROUGH SIDE GLASS WITH SHELF SUPPORT.

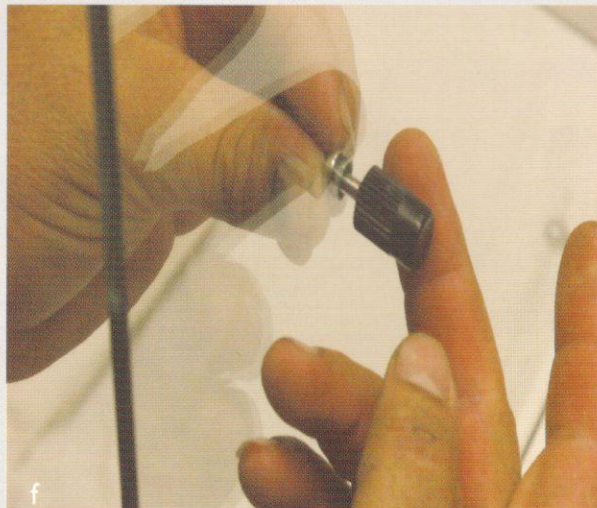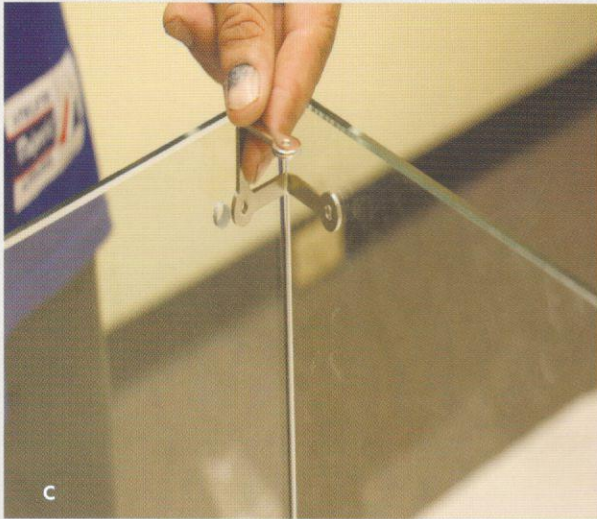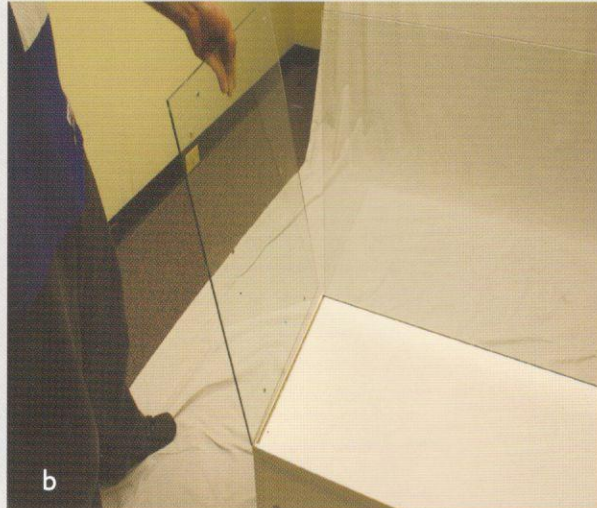

4.

GLASS DOOR ASSEMBLE

GLASS DOOR (x2) TROX SCREW x 1/2" (x2)
HW117- 4 (x1) GLASS GLAZING (x4)
HW116- 4 (x1) TOP GUIDE (x4)
HW18 - 4 (x1) DOOR PULL (x2)
NE09034-4 (x2)
#6 x 1/2" PAN SCREW (x2)

1. CONNECT HW117-4 WITH TOP GLASS USING TROX SCREW x 1/2".
2. CONNECT HW116-4 WITH BOTTOM USING #6 x 1/2" PAN SCREW
3. SNAP HW18-4 INTO HW116-4.
4. ATTACH 2 GLASS GLAZING ON 24"L EDGE OF GLASS DOOR.
5. ATTACH NE09034-4 WITH GLASS DOOR.
6. ATTACH 2 TOP GUIDE ON TOP OF GLASS DOOR.
7. PLACE GLASS SHELF ON TO SHELF SUPPORT.
8. INSERT GLASS DOOR ON CASE.
9. ADHERE DOOR PULL ON GLASS DOOR WITH PROPER POSITION.

