

## WRAR COUNTER ASSEMBLY INSTRUCTIONS



SHELF SUPPORT  
PIN (x8)



#10 CAM LOCK  
(x29)



BOLT  
(x29)



#10 SCREW CAP  
(x13)



GLIDE  
(x4)



TOP PANEL (x1)



RIGHT SIDE PANEL (x1)



LEFT SIDE PANEL (x1)



CENTER PANEL (x1)



BOTTOM PANEL (x1)



FRONT PANEL (x1)



TOE KICK (x2)



SHELF (x2)



### TOOLS NEEDED



NOTE: It is recommended that two persons assemble this unit.

1.

**BASE ASSEMBLE**

**BOTTOM PANEL** (x1)  
**TOE KICK** (x2)  
**#10 CAM LOCK** (x16)  
**BOLT** (x4)  
**GLIDE** (x4)

1. Connect toe kick to bottom panel using bolts.
2. Insert and tighten #10 cam locks.
3. Attach glides to the toe kick.



2.

**CENTER PANEL & FRONT PANEL ASSEMBLE**

**CENTER PANEL** (x1)  
**FRONT PANEL** (x1)  
**#10 CAM LOCK** (x9)  
**BOLT** (x3)

1. Connect center panel to front panel using bolt.
2. Insert and tighten #10 cam lock.
3. Connect center and front panel to base using bolts.
4. Insert and tighten #10 cam locks.



3.

### SIDE PANEL ASSEMBLE

RIGHT SIDE PANEL (x1)

LEFT SIDE PANEL (x1)

#10 CAM LOCK (x4)

BOLT (x16)


1. Attach right side panel to counter using bolts.

2. Tighten cam locks.

3. Attach left side panel to counter using bolts.

4. Tighten cam locks.

5. Sit counter on floor.

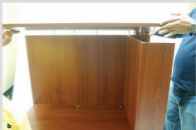

4.

### TOP PANEL ASSEMBLE

TOP PANEL (x1)

BOLT (x6)

SHELF SUPPORT PIN (x8)

SHELF (x2)

#10 SCREW CAP (x13)

1. Attach top panel to counter using bolts.

2. Tighten #10 cam locks.

3. Insert shelf support pins in position.

4. Sit shelves on shelf support pins.

5. Install #10 screw caps.

